

How to Pump Out Your Boat's MSD Holding Tank

Pump Out Stations can vary slightly, read and follow all posted directions. In general, here's how they work:



Look for this symbol for an onshore pump out station.

1. Unravel the entire hose from pump out station, then remove deck cap from boat's waste access.
2. Insert pump out hose nozzle into deck waste access.
3. Turn on pump. If there is a hose valve, open it to start suction.
4. When waste is no longer seen in the sight glass, close the hose valve and remove nozzle from deck waste access.
5. Put nozzle (with valve open) in a bucket of water and rinse for 15 seconds.
6. Close valve to turn the pump off and return hose to station.
7. Replace the deck waste cap.

Can't get to a pump out station?

Visit hrsd.com/boater-ed or call 757-460-4253 for a free pump out and for more information.

